

LéPRESSO



LePresso

THERMOBREW Turkish Tea Glass Kettle with Advanced Brewing System

SKU: LPCFFM0020

Table of Contents

Schematic View	2
Safety Precautions	2
Instructions for Use	3
Features	4
Specifications	5
Disposal	5
Warranty	6
Contact Us	6

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Schematic View



Safety Precautions

- 1. Keep out of the reach of children, infants, and pets.
- 2. This kettle is designed exclusively for heating water. Do not use any other liquids or attempt to use it with other cooking appliances.
- 3. Before plugging in, ensure that the supply voltage and current match the specifications on the kettle's label.
- 4. Never operate the kettle with wet hands.
- 5. Keep children away from the kettle while it is heating or contains hot water.
- 6. Avoid contact with boiling water or steam to prevent burns.
- Discard the first batch of water boiled with this kettle before its first use.

- 8. Do not touch any part of the kettle, except for the handle, when it is filled with boiling water.
- 9. Pour out the boiling water in a single motion to help the kettle cool down more quickly.
- 10. Always unplug the kettle in these scenarios:
- After use
- If the appliance malfunction occurs
- Before cleaning the appliance
- 11. Never pull on the power cord when removing the plug from the socket.
- 12. Clean the kettle regularly but do not immerse it, especially the heating base, in water.
- 13. The appliance should never be submerged in water.
- 14. This appliance is not suitable for use by individuals including children with reduced physical, sensory, or mental capabilities, unless supervised or instructed by a responsible person.
- 15. Children should be supervised to ensure they do not play with the appliance.

Warning: If the power cord is damaged, it must be replaced by a qualified service agent to avoid a hazard.

Instructions for Use

[A] Filling Water

- 1. The water level should be between the maximum and minimum marks on the kettle.
- 2. Do not fill the kettle above the maximum line or below the minimum line.
- 3. Ensure that water does not spill onto the outside of the kettle during filling.

[B] Placing the Kettle

1. Place the kettle on a stable, flat surface.

Note: Never heat the kettle on a wet surface, and ensure that water does not come into contact with the electrical components inside.

2. Keep the kettle away from hot surfaces or open flames.

[C] Switching On

- 1. Insert the power cord plug into the wall socket.
- 2. Ensure the power cord is safely positioned and cannot be pulled by passersby.
- 3. Press the switch to turn on the kettle.
- 4. The red indicator light will illuminate, signaling that the kettle is heating.

[D] Boiling

- 1. The kettle will automatically turn off shortly after the water boils.
- 2. The red indicator light will go out when the kettle switches off.

[E] Restoring Function

- 1. After the kettle switches off, allow it to cool for a few seconds.
- 2. After approximately 15 seconds, the kettle can be manually restored to operate again.
- 3. If the red indicator light does not come on after pressing the switch, it may be due to the temperature sensing controller still being hot. Warning: Wait for a few moments before attempting to operate the kettle again.

Features

- 1. The stainless steel bottom ensures easy cleaning and prevents scaling buildup.
- 2. Automatically switches off the kettle when the water reaches boiling point for safety.

- 3. Includes a boil-dry safety cutoff to prevent damage if the kettle is turned on without water.
- 4. The lid opens easily with a hinge for quick access and filling.
- 5. Offers full 360-degree rotation for easy handling and convenience during use.
- **6.** Features a sleek, shiny exterior that is both attractive and easy to maintain.

Specifications

Rated Voltage	220-240V
Rated Frequency	50/60Hz
Rated Power	1500-1800W
Kettle Capacity	1.8L
Teapot Capacity	1.2L
Materials	Borosilicate Glass, PP, ABS, 201 Stainless Steel

Disposal



Do not dispose of this product as unsorted municipal waste. It is important to collect such waste separately for proper treatment and recycling.



Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **https://www.lepresso.com/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

https://www.lepresso.com/warranty



If you have any questions or concerns about our Shipping and Returns

Policy, please contact us at: info@lepresso.com

Website: https://www.lepresso.com/

Instagram: lepresso_official