

LèPRESSO



LePresso

**Artisan Brew for Automatic Pour  
Over Brewing With Rotating Drip  
and Customized Settings**

SKU: LPCFFM0022

# Table of Contents

<b>Schematic View</b>	<b>2</b>
<b>Specifications</b>	<b>2</b>
<b>Attention</b>	<b>3</b>
<b>Time Setting Instructions</b>	<b>4</b>
<b>Auto Mode Instructions</b>	<b>4</b>
<b>Manual Mode Instructions</b>	<b>5</b>
<b>Programming the Brew Cycle</b>	<b>6</b>
<b>Descaling Reminder</b>	<b>7</b>
<b>Hot Water Preparation</b>	<b>7</b>
<b>Auto Standby Mode</b>	<b>8</b>
<b>Special Instructions</b>	<b>8</b>
<b>Warning</b>	<b>8</b>
<b>Warranty</b>	<b>9</b>
<b>Contact Us</b>	<b>9</b>

# Schematic View



# Specifications

Rated Voltage	240-220V
Rated Frequency	60/50Hz
Rated Power	1500W
Water Tank Capacity	1L
Glass Carafe Capacity	650ml
Power Plug	UK 3-Pin Plug
Temprature Settings	80°C to 98°C

# Attention

- 1.** Before using this appliance, please read the instruction manual thoroughly.
- 2.** Ensure that the electrical specifications of the appliance match the electric outlet being used.
- 3.** For safety, this appliance must be connected to a grounded electrical outlet.
- 4.** When first using the appliance, boil clean water in it and discard the water to clean it.
- 5.** Always place the appliance on a flat, stable surface to prevent any hazards.
- 6.** Keep the appliance out of reach of children.
- 7.** Only fill the appliance with clean water; do not use any other liquids like milk or coffee.
- 8.** Do not plug in or turn on the appliance when it is cold and empty to avoid damage to the electrical components.
- 9.** Ensure that water is filled according to the appliance's specified capacity limits, between the "Min" and "Max" marks indicated.
- 10.** Turn off and unplug the appliance after use. Clean the funnel and carafe with clear water, drying them thoroughly before storage.
- 11.** In areas with hard water, descale the appliance by boiling a suitable amount of lemonade in it as needed. This appliance features a descaling alert after every 50 uses.
- 12.** Never open the water tank cover while the appliance is running. If opening is necessary, turn off the appliance and wait at least 30 seconds to avoid any risk of burns from the hot water.
- 13.** Do NOT place the coffee maker inside a cabinet during operation to ensure proper ventilation.

# Time Setting Instructions

1. Upon powering on, the product displays 0:00 and may flicker.
2. Once the initial setting is complete, the device enters standby mode ready for further operations.
3. In standby mode, navigate to the "Appointment" function and hold the designated key for 3 seconds to access the system time settings.
4. Adjust the system time by tapping the time display and pressing the key to confirm each setting.
5. After the time is set, the device will return to standby mode for additional operations.

# Auto Mode Instructions

1. Turn on the appliance and press the "Auto Mode" button.
2. Fill the water tank up to the "Max" level.
3. Place a "V"-shaped paper filter with dimensions 1x4 into the stainless steel permanent filter.
4. Position the carafe on the appliance.
5. Press "Tare" to zero out the carafe weight.
6. Add coffee powder into the paper filter.
7. Return the carafe to the appliance; the display will indicate the coffee powder's weight.
8. Press the on/off button to initiate brewing.
9. The indicator light will flash when the appliance begins to heat the water, and the display will show the real-time water temperature.
10. To adjust the brewing temperature and the water-to-coffee ratio, turn the control knob. This will display settings such as a temperature of 93°C and a water-to-coffee ratio of 1:15, along with the coffee powder's weight.
11. Once the water temperature hits the set 93°C, the appliance will halt heating and begin a slow pour in a spiral pattern from the center outward. The display will continuously show the volume of coffee.

- 12.** After an initial pour, the machine will pause for 30 seconds to allow the coffee to bloom.
- 13.** Following the blooming phase, the appliance will resume pouring. This cycle will continue until the added water reaches a volume 15 times that of the coffee powder.
- 14.** When pouring is complete, the rotating spout will return to the center position.
- 15.** Once the machine stops dispensing water, the display will continue to indicate the volume of coffee.
- 16.** Allow 30 seconds for all the coffee to drip into the carafe, then remove the stainless steel filter and enjoy your freshly brewed coffee.

## Manual Mode Instructions

- 1.** Turn on the appliance and set it to "Manual Mode."
- 2.** Fill the water tank until it reaches the "Max" indicator.
- 3.** Place a "V"-shaped paper filter, size 1x4, into the stainless steel permanent filter.
- 4.** Position the carafe on the appliance.
- 5.** Press 'Tare' to zero the scale, then remove the carafe to add coffee powder to the paper filter.
- 6.** Replace the carafe and the display will show the weight of the coffee powder.
- 7.** To adjust your desired brewing settings:
  - A.** For temperature control, turn the knob to "Temp" and press the "▲/▼" button to set the brewing temperature between 80°C and 98°C.
  - B.** For the coffee to water ratio, turn the knob to "Ratio of coffee powder & water" and press the "▲/▼" button to set the ratio between 1:10 and 1:20.
- 8.** After setting the temperature and coffee-to-water ratio, press the on/off button to begin brewing.
- 9.** The appliance will heat the water, and the display will show the current temperature of the water tank.

- 10.** Once the water reaches the pre-set temperature, the appliance will stop heating and begin dispensing water in a spiral pattern from the center outwards. The display screen will show the volume of coffee being brewed.
- 11.** The appliance will pause dispensing briefly after 30 seconds for the coffee to bloom.
- 12.** After the blooming period, the appliance will resume dispensing water. This cycle will continue until the total volume of water dispensed matches the coffee-to-water ratio you set.
- 13.** Once the water dispensing is complete, the dispensing spout will return to the center.
- 14.** The display will continue to show the volume of coffee. Wait for 30 seconds until all the coffee has dripped into the carafe.
- 15.** Remove the stainless steel filter and enjoy your freshly brewed coffee.

## Programming the Brew Cycle

- 1.** Turn on the appliance and select either auto or manual mode. Adjust the water temperature and the coffee-to-water ratio according to your preference and add the desired amount of coffee powder.
- 2.** After you have set the water temperature and the coffee-to-water ratio, rotate the control knob to "Prog". The display will show the last programmed time setting.
- 3.** To set a new brew time, press the "▲/▼" button to adjust the time as needed, then press the on/off button to confirm your setting.
- 4.** Once the time is set, press the on/off button again to activate the timer. The appliance will then be set to start brewing at the specified time.
- 5.** At the scheduled time, the appliance will automatically begin the brewing process based on the previously set parameters.

## Descaling Reminder

- 1.** The cleaning function indicator will begin to flash after the appliance has been used 50 times.
- 2.** Fill the water tank to the "Max" mark with clean water and add the recommended amount of citric acid. Turn the control knob to the "Cleaning" setting. The display will indicate a temperature of 100°C.
- 3.** To start the descaling process, press the on/off button. The appliance will begin to heat the water. The current temperature will be displayed in real-time.
- 4.** Once the water temperature reaches 100°C, the heating will cease and the appliance will start to dispense water until the tank is empty.
- 5.** The cleaning cycle is complete when the "Clean" function's indicator light stops flashing.

## Hot Water Preparation

- 1.** Fill the water tank with a suitable amount of clean water and turn the control knob to "Hot Water." The display will show the current water temperature.
- 2.** Adjust the water tank's temperature by pressing the "▲/▼" button. Set the temperature slightly below the boiling point for safety.
- 3.** Activate the appliance by pressing the on/off button. Upon activation, the machine will begin to heat the water and the display will continuously update with the real-time temperature of the water.
- 4.** Once the water reaches the set temperature, the appliance will cease heating. It will then begin to dispense the hot water through a rotating spout until the water tank is completely empty.

## Auto Standby Mode

1. When the appliance is powered on and remains inactive for 30 seconds, the indicator light will turn off and the system will enter timer mode.
2. To activate standby mode, rotate the control knob or press any button. The indicator light will illuminate, signaling that the appliance is ready for use in any mode.

## Special Instructions

1. In the manual/auto mode, if the carafe or coffee powder is not inserted, the display will read "- - - -" / "NoC" and the spout will not release water after heating is complete.
2. During boiling or dispensing in either manual or auto mode, the weight of the coffee powder, the coffee-to-water ratio, and the total water dispensed can be viewed by rotating the control knob. If no interaction occurs within 5 seconds, the display automatically shows the volume of water added.
3. If the carafe is removed during dispensing, the flow will stop and the screen will display "- - - -". The operation will resume only if the carafe is placed inside the system within 30 seconds. Otherwise, the machine will turn off automatically.
4. After dispensing is complete, the spout will continue to rotate until it returns to its original position.
5. This is sensitive to temperature changes. For accurate measurements, press the "Zero" button to tare the scale before adding coffee. The scale should weigh no more than 1 kg to avoid damage.

## Warning

1. Avoid immersing the appliance in water or any other liquid to prevent electrical hazards.
2. If the power cord is damaged, it must be replaced by the manufacturer or an authorized service department to ensure safety.

3. Do not attempt to disassemble the appliance yourself. For repairs, refer to an authorized service provider.
4. This appliance should not be used by children and individuals with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are under the supervision of a person responsible for their safety.
5. Always read the instruction manual thoroughly before using the appliance.

## Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

## Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [info@lepresso.com](mailto:info@lepresso.com)

Website: <https://www.lepresso.com/>

Instagram: [lepresso\\_official](https://www.instagram.com/lepresso_official)